



Purpose: This document provides instructions for replacing the battery in a SentriGuard® Lockbox.

Tools Needed: T15 Torx screwdriver

1: RELEASE SHACKLE USING THE APP.

NOTE: IF BATTERY IS DEAD. PRESS THE RECESSED BUTTON BETWEEN THE LED'S TO ACTIVATE THE BACKUP BATTERY.



2: REMOVE TOP CAP PLUG TO ACCESS SCREW



3: USING T15 TORX SCREWDRIVER, REMOVE TOP



4: REMOVE TOP CAP TO ACCESS BATTERY COMPARTMENT.




5: UNPLUG AND REMOVE MAIN BATTERY.





6: PLUG IN NEW BATTERY.

NOTE: MAKE SURE THE PINS ON THE BATTERY CONNECTOR ALIGN WITH THE PINS ON THE PCB CONNECTOR.

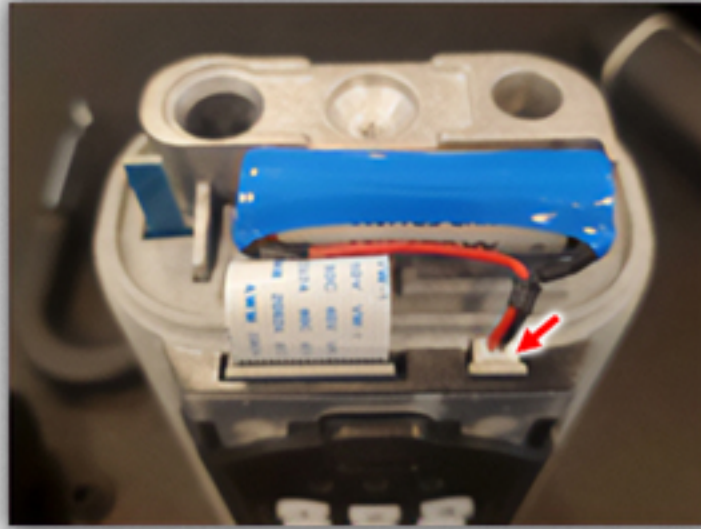

7: REPLACE TOP CAP.

NOTE: MAKE SURE THE TOP CAP IS SETTING FLUSH ON THE OUTER SLEEVE AND THE TRANSITION FROM THE TOP CAP TO THE FRONT KEY BOARD COVER IS UNIFORM.

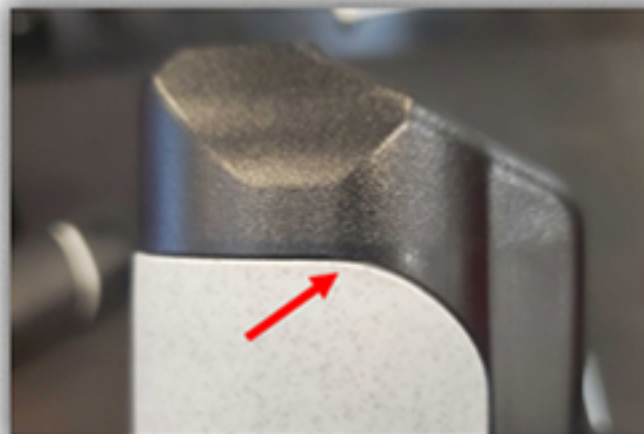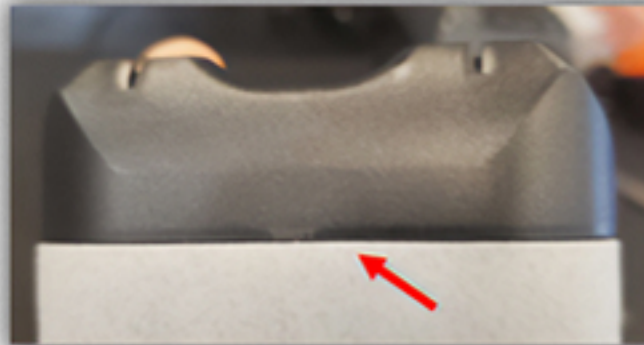

8: TIGHTEN T15 TORX SCREW.



9: REPLACE TOP CAP PLUG.



**INSERT AND RELEASE SHACKLE OR KEY BIN TO
VERIFY REPLACEMENT BATTERY IS
WORKING PROPERLY.**

***Insert and release shackle or key bin to verify replacement
battery is working properly.***